



Coby Kyros MID9042 Camera Replacement

Replace the camera of your Coby Kyros MID9042 tablet.

Written By: Samantha Rollings



INTRODUCTION

Use this guide to replace the camera of the Coby Kyros MID9042 tablet.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-


Step 1 — Camera



i Before taking apart the tablet, power off the device.

- Remove the anti-slip pads from all 4 corners of the back of the device.
- Remove the four 3.2 mm Phillips #0 screws from the back cover.


Step 2

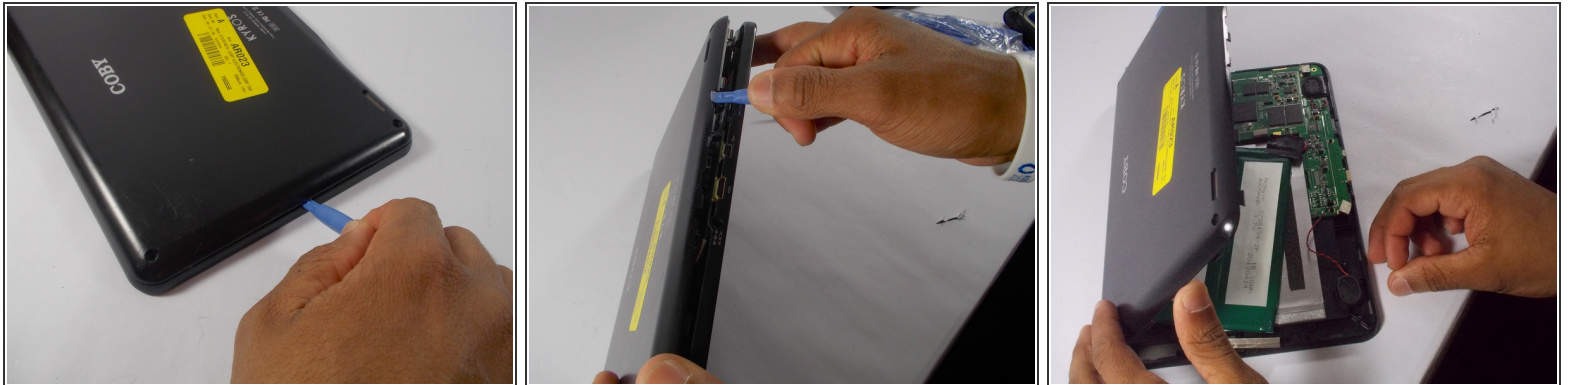


! Be careful not to break the inner plastic tabs while pulling the back cover off.

- Use the blue plastic opening tool to wedge the back cover apart from the front.
- Once the edges are wedged apart, use hands to lift up the back of the tablet.

Step 3

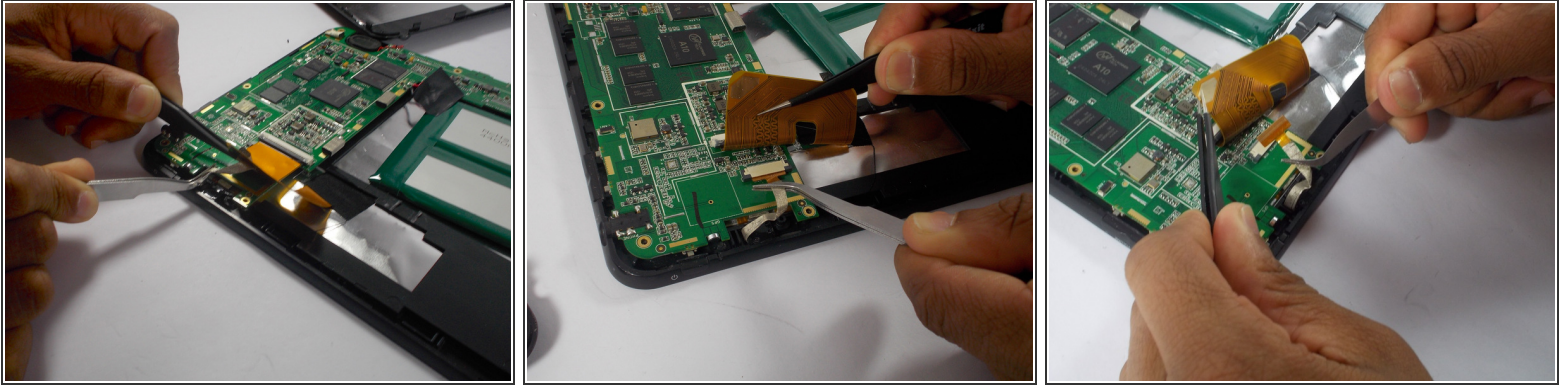

- Locate gold flap and use tweezers to lift the flap up.
 - Use a second pair of tweezers to pull the gold tab connected to the camera out of the circuit board.
 - Once the tab is removed from the circuit board, pull the camera out of the tablet.
-  Be sure to avoid pulling the gold flap off the the circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 04:08:32 AM.